

magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice

## Rezistenta 3000W 230V 255mm #415597

Fara TVA: 452,10 Lei

Pret cu TVA: 538,00Lei

Rezistenta 3000W 230V 255mm #415597

Putere: 3000W

Tensiune de alimentare: 230V

Circuite de incalzire: 3

Lungime: 255mm

Latime: 38mm

Inaltime: 26mm

Montare: flansa cu 3 gauri

Conexiune: faston tata

Diametru tub: 6,3mm

Diametru manson termostat: 7,5mm

Lungime manson termostat: 199mm

Distanța între axe gauri: 63mm

Diametru de montare: 47,5mm

Diametru gauri: 8/10mm

Lungime conexiune: 15mm

Aplicatie: rezistenta imersie

Compatibil cu:

LF 3355024

Ascaso,

Juno,

Zanussi Professional

ALPENINOX

ELECTROLUX PROFESSIONAL

JUNO-RÖDER-SENKING

KÜPPERSBUSCH

WHIRLPOOL - INDESIT

Potrivit pentru:

KÜPPERSBUSCH Boiling pan electric FEK080, NEK080, PEK088, PEK088 OLD

ZANUSSI Dishwasher LS510 (501010), LS520 (501020), LS520D (501021), LS520F (501022), LS520M (501028),

LS520K (501029), C51 (727116), C52 (727120)

Electrolux electric pasta cooker 163401 9109-421



*magazin online HORECA*

**Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice**

Electrolux electric pasta cooker 163403 9109-421  
Electrolux electric pasta cooker 168144 909-  
Electrolux electric pasta cooker 168944 909-25072005  
Electrolux electric pasta cooker 173001 9109-421  
Electrolux electric pasta cooker 176001 422-814  
Electrolux electric pasta cooker 176010 510-814  
Electrolux electric pasta cooker 178147  
Electrolux electric pasta cooker 178447  
Electrolux electric pasta cooker 178747  
Electrolux electric pasta cooker 195550 9002-9111  
Electrolux electric pasta cooker 204014 301-07122003  
Electrolux electric pasta cooker 204016 301-07122003  
Electrolux electric pasta cooker 204028 301-29121999  
Electrolux electric pasta cooker 214014 301-31012005  
Electrolux electric pasta cooker 214016 301-31012005  
Electrolux electric pasta cooker 214028 301-29121999  
Electrolux electric pasta cooker 224013 301-07122003  
Electrolux electric pasta cooker 224014 301-29121999  
Electrolux electric pasta cooker 224015 301-29121999  
Electrolux electric pasta cooker 224016 301-29121999  
Electrolux electric pasta cooker 224027 301-29121999  
Electrolux electric pasta cooker 224028 301-29121999  
Electrolux electric pasta cooker 775220 9002-9111  
Electrolux pasta cooker gas 163402 422-527  
Electrolux pasta cooker gas 163404 422-814  
Electrolux pasta cooker gas 163405 422-814  
Electrolux pasta cooker gas 163406 422-814  
Electrolux pasta cooker gas 173002 422-526  
Electrolux pasta cooker gas 173003 422-814  
Electrolux pasta cooker gas 176002 422-814  
Electrolux pasta cooker gas 176003 528-814  
Electrolux pasta cooker gas 176009 510-814  
Electrolux pasta cooker gas 195500 422-527  
Electrolux pasta cooker gas 204002 301-  
Electrolux pasta cooker gas 204006 301-07122003  
Electrolux pasta cooker gas 204008 301-07122003  
Electrolux pasta cooker gas 214006 301-31012005  
Electrolux pasta cooker gas 214008 301-31012005  
Electrolux pasta cooker gas 224005 301-03012005

magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice

Electrolux pasta cooker gas 224006 301-07122003

Electrolux pasta cooker gas 224007 301-14122003

Electrolux pasta cooker gas 224008 301-14122003

Electrolux pasta cooker gas 224025 301-14122003

Electrolux pasta cooker gas 775200 9002-9111

Electrolux dishwasher 501010 9101-550

Electrolux dishwasher 501020 9101-550

Electrolux dishwasher 501022 9101-550

Electrolux dishwasher 501030 9101-550

Electrolux dishwasher 501032 9101-550

Electrolux dishwasher 5CF50B 8804-550

Electrolux dishwasher 5CF51B 8804-550

Electrolux dishwasher 5CF52B 8804-550

Electrolux dishwasher 690208 9101-420

Electrolux dishwasher 690210 9101-420

Electrolux dishwasher 690212 9101-420

Electrolux dishwasher 727116 9101-550

Electrolux dishwasher 727120 9101-550

