

magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice

## Termostat reglabil 30-90°C EGO 55.34212.814 #390038

Fara TVA: 349,19 Lei

Pret cu TVA: 415,54Lei

Termostat reglabil 30-90°C EGO 55.34212.814 #390038

temperature max. 90°C

operating temperature range 30-90°C

number of poles 3 -pole

function 3CO

switching capacity 16A

probe diameter 6mm

probe length 215mm

capillary pipe length 900mm

capillary pipe length insulated - mm

gland nut -

shaft length - mm

Compatibil :

Alpeninox 045169, 0C5345

Bonnet 5004E

EGO 5534212814

Electrolux 045169, 0C5345

Juno-Röder-Senking

MORICE

Solymac P76ET

Therma

Thirode 5004E

Whirlpool 481227118068

Zanussi045169, 0C5345

Electrolux dishwasher 727106

Electrolux electric pasta cooker 163401 9109-421

Electrolux electric pasta cooker 163403 9109-421

Electrolux electric pasta cooker 168144 909-

Electrolux electric pasta cooker 168944 909-25072005

Electrolux electric pasta cooker 173001 9109-421

Electrolux electric pasta cooker 176001 422-814

Electrolux electric pasta cooker 176010 510-814

Electrolux electric pasta cooker 178147



*magazin online HORECA*

**Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice**

Electrolux electric pasta cooker 178447

Electrolux electric pasta cooker 178747

Electrolux electric pasta cooker 195550 9002-9111

Electrolux electric pasta cooker 204014 301-07122003

Electrolux electric pasta cooker 204016 301-07122003

Electrolux electric pasta cooker 204028 301-29121999

Electrolux electric pasta cooker 214014 301-31012005

Electrolux electric pasta cooker 214016 301-31012005

Electrolux electric pasta cooker 214028 301-29121999

Electrolux electric pasta cooker 224013 301-07122003

Electrolux electric pasta cooker 224014 301-29121999

Electrolux electric pasta cooker 224015 301-29121999

Electrolux electric pasta cooker 224016 301-29121999

Electrolux electric pasta cooker 224027 301-29121999

Electrolux electric pasta cooker 224028 301-29121999

Electrolux electric pasta cooker 580512 01-01-

Electrolux electric pasta cooker 582379 01022003-

Electrolux electric pasta cooker 582380 01022003-

Electrolux electric pasta cooker 591501 01-01-

Electrolux electric pasta cooker 591511 01-01-

Electrolux electric pasta cooker 599611 01022003-

Electrolux electric pasta cooker 599612 01022003-

Electrolux electric pasta cooker 775220 9002-9111

Electrolux pasta cooker gas 163402 422-527

Electrolux pasta cooker gas 163404 422-814

Electrolux pasta cooker gas 163405 422-814

Electrolux pasta cooker gas 163406 422-814

Electrolux pasta cooker gas 173002 422-526

Electrolux pasta cooker gas 173003 422-814

Electrolux pasta cooker gas 176002 422-814

Electrolux pasta cooker gas 176003 528-814

Electrolux pasta cooker gas 176009 510-814

Electrolux pasta cooker gas 195500 422-527

Electrolux pasta cooker gas 204002 301-

Electrolux pasta cooker gas 204006 301-07122003

Electrolux pasta cooker gas 204008 301-07122003

Electrolux pasta cooker gas 214006 301-31012005

Electrolux pasta cooker gas 214008 301-31012005

Electrolux pasta cooker gas 224005 301-03012005

magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice

Electrolux pasta cooker gas 224006 301-07122003

Electrolux pasta cooker gas 224007 301-14122003

Electrolux pasta cooker gas 224008 301-14122003

Electrolux pasta cooker gas 224025 301-14122003

Electrolux pasta cooker gas 775200 9002-9111

Electrolux dishwasher 500042 8609-8801

Electrolux dishwasher 500043 8609-8801

Electrolux dishwasher 500052 8609-9109

Electrolux dishwasher 500053 8609-9109

Electrolux dishwasher 500054 8609-9109

Electrolux dishwasher 500120 8609-8801

Electrolux dishwasher 500121 8609-9109

