

magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații
Automatizări / Materiale Electrice

**Termostat reglabil cuptor 50-304°C sonda Ø4x100mm capilar 830mm
ZANUSSI 5611490011 EGO 55.17062.420 #COK202ZN**

Fara TVA: 84,03 Lei

Pret cu TVA: 100,00Lei

Termostat reglabil cuptor 50-304°C sonda Ø4x100mm capilar 830mm ZANUSSI 5611490011 EGO 55.17062.420 #COK202ZN

Marja de temperatura: 50-304°C

Dimensiuni sonda: Ø4x100mm

Lungime capilar: 830mm

Ax:24mm

Contacte: 2 contacte

Cod original: 3890770047, 3890770245, 55.17062.420, 5611490011

Compatibil cu:

3890770047, 3890770245, 5517062420, 55.17062.420, 5611490011

AEG 41056VI-M 94031311400

AEG 41016VI-WN R05 94031313300

AEG 41056VI-MN 94031313400

AEG 41056VI-MN 66L 94031315600

AEG 41016VI-WN 24T 94031315501

AEG 41056VI-MN 24T 94031317301

AEG 41016VI-WN 94031315502

AEG 41056VI-MN 94031317302

AEG 41056VI-MN 94031319400

AEG 41016VI-WN 94031319000

AEG BE4314021M 94418702600

AEG BE2000201M 94418599301

AEG BE4013021M 94418571000

AEG BE3013021M 94418589201

AEG BE4313091M 94418731500

AEG BE4003001M 94418588201

AEG BE3003001M 94418588100

AEG BE4313091M 94418570000

AEG BE3013021M 94418589200

AEG BE4013021M 94418589300



magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații
Automatizări / Materiale Electrice

AEG BE4313091M 94418589101
AEG BE3003001M 94418588101
AEG BE3003001M 94418573500
AEG BE3013021M 94418570800
AEG BE3003001D 94418573400
AEG BE4313091M 94418589100
AEG BE4013021M 94418731300
AEG BE4003001M 94418574200
AEG BE4013021M 94418589301
AEG BE3000021M 94418711001
AEG BE3003501M 94418731600
AEG Competence E 4001-4M AEG-Nordic 94032008300
AEG Competence E 4401-4W AEG-Nordic 94032008800
AEG E3051-4-D 94031694700
AEG E4101-4-M EURO 94032010600
AEG E4001-4-M 94032012000
AEG E4101-4-W 94032012300
AEG E4101-4-M 94032012400
AEG E42010-4-M 94032012600
AEG E43010-4-M 94032012700
AEG E4106-4-M (IND.) 94032012800
AEG E43013-4-M 94032013800
AEG E41065-4-M 94032014800
AEG E30512-4-M 94032017000
AEG E33512-4-D 94032017100
AEG E43012-4-D 94032018000
AEG E43012-4-M 94032018200
AEG E32003-4-M 94031692000
AEG E30510-4-M R05 94032031200
AEG E3101-4-M EURO 94032010400
AEG E31510-4-M DE R07 94031699800
AEG E31560-4-M R07 94032034600
AEG E30002-4-M 94032016100
AEG E30002-4-W 94032016000
AEG E30003-4-M 94032016400
AEG E3000-4-AL 94032011600
AEG E3000-4-D 94032011200
AEG E3000-4-M 94032011500
AEG E31002-4-M 94032016700



magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații
Automatizări / Materiale Electrice

AEG E3101-4-M EU R07 94031699100
AEG E31510-5-M DE R08 94032044100
AEG E3351-5-D DE R08 94032038400
AEG E33512-5-D EU(ML) 94032046501
AEG E31510-5-M DE R08 94032044101
AEG E31510-5-M 94032044102
AEG E31560-5-M 94032044202
AEG E3151-7-M 94032060400
AEG E20223M 05I 94031404600
AEG E20228M 55I 94031404900
AEG E1000-4-B 94032010900
AEG E1000-4-M 94032011000
AEG EE3313091M 94032119500
AEG EE3313031M 94032117001
AEG EE3313091W 94032119600
AEG EE4013031M 94032112701
AEG EE3313091W 94032111701
AEG EE3313091M 94032111600
AEG EE4013021M 94032117700
AEG EE4013031M 94032102600
AEG EE3313091W 94032111700
AEG EE3313031M 94032117000
AEG EE4313091M 94032119800
AEG EE4003011M 94032105400
AEG EE4003011M 94032111301
AEG EE3313091M 94032111601
AEG EE3313091W 94032100200
AEG EE3313091M 94032100100
AEG EE4013031M 94032117800
AEG EE4313091M 94032111801
AEG EE4013031M 94032112700
AEG EE4313291M 94032119900
AEG EE3314031M 94032115800
AEG EE4313091M 94032100600
AEG EE4313091M 94032111800
AEG EE3013021M 94032101800
AEG EE3013021W 94032101900
AEG EE1000001M 94032114901
AEG EE3013021W 94032112601



magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații
Automatizări / Materiale Electrice

AEG EE3003011D 94032113000
AEG EE3000011M 94032112901
AEG EE2003021M 94032115601
AEG EE3013021M 94032112501
AEG EE3013021D 94032112300
AEG EE3013031M 94032101700
AEG EE3003021M 94032112201
AEG EE3000021D 94032111901
AEG EE3013021W 94032112600
AEG EE3003021M 94032101500
AEG EE3003011D 94032104600
AEG EE3000021W 94032112101
AEG EE3003011W 94032104800
AEG EE2000021M 94032115301
AEG EE3013021D 94032101600
AEG EE3003031M 94032116501
AEG EE3013031M 94032112400
AEG EE3000021M 94032112001
AEG EE3003011M 94032111201
AEG EE3013021M 94032112500
AEG EE3013021D 94032112301
AEG EE3013031M 94032112401
AEG EE3003011M 94032104700
AEG EE3003021M 94032112200
AEG EE3003031M 94032116500
AEG EE2000201M 94032115101
AEG EE2000001M 94032115501
AEG EE3003011W 94032113100
AEG EE3003011M 94032111200
AEG EE1300351X 94032121800
AEG EE3013521M 94032120300
AEG BE3003001M 94418700501
AEG BE3013021M 94418598401
AEG BE3003001M 94418587201
AEG BC3303001M 94418595001
AEG BE3003001M 94418586703
AEG EE3003021W 94032116900
AEG EE3003021D 94032116800
AEG EE3013021M 94032114801



magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații
Automatizări / Materiale Electrice

AEG EE3003021D 94032116801
AEG EE3003021W 94032116901
AEG BC3303001M 94418714500
AEG BC3303501M 94418737800
AEG BE3003001M 94418587202
AEG BE3013021M 94418589202
AEG BE3003001M 94418588102
AEG BE1003001M 94418599202
AEG BE3003001M 94418595202
AEG BC200320WM 94418724301
AEG BE3003501M 94418731601
AEG BC3303501M 94418737801
AEG BE300300MM 94418731901
AEG BE3003001W 94418589602
AEG E30510-4-M DE R07 94031699700
AEG EE3000021M 94032109400
AEG E30510-6-M 94032062200
AEG EE2000001M 94032115100
AEG EE3000011M 94032112900
AEG EE2000021D 94032115200
AEG EE2000021M 94032115300
AEG EE4000011M 94032105300
AEG EE3000011M 94032104200
AEG EE3000021M 94032112000
AEG BE2000201M 94418599300
AEG BE3000021M 94418711000
AEG EE3000021M 94032101300
AEG E4000-5-LG 94032037601
AEG EE2000001M 94032115500
AEG E3051-4-W DE R07 94031699400
AEG E32003-4-M R05 94032019700
AEG E3051-7-M 94032060200
AEG EE3013081M 94032110200
AEG BE3013021M 94418585500
AEG EE3013021M 94032109500
AEG E31552-5-D EU(ML) 94032051700
AEG E31552-5-D EU(ML) 94032051701
AEG E31552-5-W EU(ML) 94032051800
AEG E31552-5-W EU(ML) 94032051801



magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații
Automatizări / Materiale Electrice

AEG E31560-5-M DE R08 94032044201
AEG E33512-4-W 94032017200
AEG E33512-4-M 94032017300
AEG E42012-4-W 94032017800
AEG JEH45312B R05 94031814100
AEG JEH45312W R05 94031814000
AEG JEH55001E R05 94031814300
AEG JEH13001E R05 94031812800
AEG JEH34002E R05 94031813700
AEG BE2003001M 94418599402
AEG ECK456220M 94032134100
AEG BE300300MM 94418740200
AEG EE3003011M 94032111202
AEG EE3013021W 94032112602
AEG EE3013021D 94032112302
AEG EE3003021W 94032116902
AEG EHBZDB 94032121401
AEG EHBZDM 94032121501
AEG EEB351010M 94032130400
AEG EES35111XM 94032131000
AEG BE3002021M 94418587902
AEG BE400302WM 94418739201
AEG BES35111XM 94418771000
AEG BCS45131XM 94418772101
AEG BES331010M 94418781500
AEG BEK101010M 94418781301
AEG BCK452210M 94418788100
AEG EHBZDW 94032121601
AEG BE430442SW 94418724701
AEG BEB351010M 94418797800
AEG BCS452210W 94418786900
AEG EEB342010M 94032132300
AEG E3351-4-W DE R07 94032034800
AEG E33512-5-W EU(ML) 94032046601
AEG E33512-5-W EU(ML) 94032046602
AEG 41056VH-MN 94031313200
AEG E4107-5-M 94032051104
AEG EE2003061M 94972254200
AEG EE3003061M 94972254300



magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații
Automatizări / Materiale Electrice

AEG BE4003001M 94418700601
AEG BE4003001M 94418700600
AEG EE2003061M 94972254203
AEG BE3003061M 94971638000
AEG EE2003061M 94972254201
AEG EE3003061M 94972254304
AEG EE2000221W 94972255000
AEG EE2003061M 94972254205
AEG EE3003061M 94972254307
AEG EE3003061M 94972254301
AEG EE3003061M 94972254305
AEG EE2003061M 94972254204
AEG EE3003061M 94972254306
AEG BES33101ZM 94971652402
AEG EES33101ZM 94972255502
AEG BES33101ZM 94971652400
AEG BES33101ZM 94971652401
AEG GG112102M 94971340400
AEG GG112102M 94971340401
AEG BE3303071M 94418593402
AEG EE3013021M 94032114802
AEG BE3013421W 94418594103
AEG BE3013021M 94418598402
AEG BE3013521M 94418737001
AEG BE301352NM 94418737401
AEG BEB351110B 94418781100
AEG BCS331150M 94418780600
AEG BE3013021M 94418590901
AEG BE3303071M 94418593401
AEG BCE451350M 94418780101
AEG EEB355020M 94032134900
AEG BEB355020M 94418818800
AEG BEE455010M 94418807400
AEG BEB351010M 94418770501
AEG BEB351010M 94418770500
AEG BEB351010M 94418781701
AEG BEB351010M 94418781700
AEG BEK351110M 94418784200
AEG BOBZDM 94418760200



magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații
Automatizări / Materiale Electrice

AEG ED320 94032133800
AEG BEB351010M 94418770502
AEG EEB351010D 94032130502
AEG EEB351010M 94032130402
AEG EES35111XM 94032131002
AEG BCE451010M 94418771802
AEG BES351110M 94418780501
AEG BEK35101YM 94418770702
AEG BEB351010M 94418781702
AEG BES351110M 94418784102
AEG BCS451010M 94418782102
AEG EES23101ZM 94972255400
AEG EES33101ZM 94972255501
AEG EES33101ZM 94972255500
AEG EE3003061M 94972254303
AEG EE0300306M 94972254800
AEG EE3003061M 94972254309
AEG EE0300306M 94972254801
AEG EE3003061M 94972254308
AEG BCK452210M 94418771900
AEG BCK45221YM 94418772000
AEG JB094C7 94971653300
AEG JH094C7 94972255900
AEG BCK452210M 94418771901
AEG E30512-4-D R05 94032020700
AEG E30512-4-W R05 94032020800
AEG E3051-4-W R05 94032024400
AEG E30532-4-M R05 94032032500
AEG E4001-4-W R05 94032025500
AEG E4106-4-M R05 94032026300
AEG E4106-4-M R05 94032032700
AEG E41065-4-M R05 94032031800
AEG E43012-4-W R05 94032022000
AEG E43013-4-M R05 94032022400
AEG JEB55301A R05 94418406000
AEG JEB55301E R05 94418405900
AEG JEH55301E R05 94031814500
AEG E30003-4-W R05 94032019900
AEG E30002-4-W R05 94032020200



magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații
Automatizări / Materiale Electrice

AEG E31002-4-D R05 94032020400
AEG E3000-4-W R05 94032023800
AEG E5701-4-A R05 94032033000
AEG E43012-4-M GR R07 94032036400
AEG E41065-5-M R08 94032045300
AEG E4001-5-W DE R08 94032039200
AEG E40010-5-M DE R08 94032044300
AEG E40015-5-M R08 94032045200
AEG 30006VE-WN 94031312600
AEG 31016FF-W 94031311900
AEG 41016VH-WN 94031313100
AEG E1000-5-D DE R08 94032049000
AEG EHBZB 94853338400
AEG EHBM 94853338201
AEG EHAW 94853338000
AEG BOGZB 94427108800
AEG BOBZM 94427108600
AEG BOBZB 94427108500
AEG BOBB 94427108200
AEG BE4003001M 94418581400
AEG EE4000011M 94032113200
AEG BE5431302B 94418721200
AEG BE430442SM 94418724600
AEG BE301352NM 94418737400
AEG BE400302WM 94418739200
AEG BE3002421W 94418592601
AEG BE401342PM 94418703502
AEG BE3003001M 94418702001
AEG BE3003001M 94418702000
AEG BE4003001M 94418701901
AEG BE4003001M 94418701900
AEG BE3002021M 94418587901
AEG BE3002421B 94418587402
AEG BE3003001M 94418595201
AEG EHBZM 94032118600
AEG EE3003011M 94032115701
AEG EE3013021M 94032114201
AEG EHBZDM 94032121500
AEG BE3013021M 94418590900



magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații
Automatizări / Materiale Electrice

AEG BE3002021M 94418587900
AEG BE3003001M 94418595200
AEG BC3003001M 94418594900
AEG BE3002401M 94418573100
AEG BE3002421M 94418570300
AEG BE3003001M 94418587200
AEG BE3003001M 94418587100
AEG BE3003001M 94418586701
AEG BE4003001M 94418584900
AEG BE3013421M 94418584500
AEG EE3003011M 94032115700
AEG EE3000021M 94032114700
AEG EE3013021M 94032114800
AEG EE3000421W 94032114500
AEG EE3013021M 94032114200
AEG EE3000421W 94032107700
AEG EE3002411M 94032104400
AEG BE4013021M 94418585600
AEG BE3003001M 94418700500
AEG BE3003021B 94418599700
AEG BE4013021M 94418598500
AEG BE3013021M 94418598400
AEG BE3003021M 94418598300
AEG BE3013421M 94418598100
AEG BE3013021M 94418597300
AEG BE3013421W 94418594100
AEG BE3303071M 94418593400
AEG BE3003021M 94418592700
AEG BE3003021W 94418592800
AEG BE3013021M 94418591100
AEG BE301302PM 94418703600
AEG BE401342PM 94418703500
AEG EHBZM 94853338502
AEG EHBZB 94853338402
AEG BOBZM 94427108601
AEG BOBZB 94418715400
AEG BE3002401B 94418700201
AEG BE3002021B 94418599801
AEG BE3003021B 94418599701



magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații
Automatizări / Materiale Electrice

AEG BE4013021M 94418598501
AEG BE3003021M 94418598301
AEG BE3013021M 94418597301
AEG BC301302NM 94418718000
AEG BCK456220M 94418810700
AEG BCE455020M 94418809500
AEG BCK452210M 94418785400
AEG BCK452210M 94418771902
AEG BEK431110W 94418793500
AEG BEK451110M 94418793600
AEG BD320 94418803800
AEG BER451110B 94418803600
AEG BEK451210M 94418795402
AEG BEK431010M 94418801801
AEG E1000-5-W DE R08 94032049100
AEG E30510-5-M DE R08 94032044000
AEG E31560-5-M DE R08 94032044200
AEG E41010-5-M DE R08 94032044400
AEG E4101-5-A DE R08 94032048500
AEG E4101-5-W DE R08 94032039700
AEG E4106-5-M DE R08 94032041000
AEG 41016VI-WN 24T 94031315500
AEG E41010-5-M DE R08 94032044401
AEG E43013-4-M R07 94032022401
AEG E6871-4-M R05 94032033500
AEG E6871-4-M R07 94032033500
AEG E4106-5-M DE R08 94032041001
AEG E41065-5-M R08 94032045301
AEG E31552-5-M 94032051903
AEG E4001-7-M 94032060900
AEG E40015-7-M 94032061900
AEG B6871-4-A R05 94418528400
AEG E41065-5-M 94032045303
AEG E40015-5-M 94032045201
AEG E41065-5-M 94032045302
AEG E40010-5-M 94032044301
AEG E4106-5-M 94032041003
AEG E4101-7-M DE 94032061201
AEG E4106-5-M 94032041002



magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații
Automatizări / Materiale Electrice

AEG Competence E 4001-4W AEG-Nordic 94032008200
AEG Competence E 4001-4A AEG-Nordic 94032008400
AEG Competence E 4401-4B AEG-Nordic 94032008900
AEG 40006 VE W (CH) 94031311800
AEG Competence E 31915-4A Nordic 94032019000
AEG Competence 10006 FFW CH 94031311700
AEG Competence E 3000-4B Euro 94032010100
AEG Competence E 3000-4M Euro 94032010200
AEG Competence E 3000-4W Euro 94032010300
AEG BE4003001M 94418588202
AEG BE4003001M 94418700602
AEG EE4003011M 94032111300
AEG BE4003001M 94418588200
AEG 41056VI-MN 66L 94031317300
AEG 40036VI-WN 24T 94031315000
AEG 41056VI-MN 24T 94031317300
AEG E4001-5-M 94032039401
AEG E20223D 05I 94031405100
AEG E30915-4-M R05 94032013500
AEG E30512-4-M R05 94032020900
AEG E3051-4-AL R05 94032024600
AEG E4001-4-M R05 94032025700
AEG E40015-4-M R05 94032031000
AEG E43012-4-M R05 94032022100
AEG E20228M R05 94031405600
AEG E30003-4-M R05 94032020000
AEG E30002-4-M R05 94032020300
AEG E1000-4-M R05 94032023500
AEG E3000-4-AL R05 94032024100
AEG E4001-5-M DE R08 94032039400
AEG E4001-5-A DE R08 94032048400
AEG 41016VH-WN 71L 94031315300
AEG 41016VI-WN 66L 94031315500
AEG 61016VI-AN 94031313600
AEG E3050-5-M DE R08 94032049400
AEG E3051-5-M DE R08 94032038100
AEG 61016VI-AN 24T 94031315800
AEG E31552-5-M EU(ML) 94032051900
AEG E31552-5-M EU(ML) 94032051901



magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații
Automatizări / Materiale Electrice

AEG E33512-5-M EU(ML) 94032046701

AEG E4101-5-M DE R08 94032039801

AEG E33512-5-M EU(ML) 94032046702

AEG EHAB 94853337902

AEG BOBB 94418715100

AEG BE2000001M 94418700801

AEG EE3000021M 94032114701

AEG EE3000421W 94032114502

AEG EE4000011M 94032113201

AEG BC300000MM 94418752400

AEG EE3013031M 94032112402

AEG EE2000201M 94032115102

AEG EE2000001M 94032115502

AEG EE3000011M 94032112902

AEG EE4013031M 94032117801

AEG EE4313291M 94032119901

AEG EEB100010M 94032129901

AEG EEB230010M 94032130000

AEG EEB230010M 94032130001

AEG EEK23001YM 94032130100

AEG BE3000021M 94418711002

AEG BEB350010M 94418770301

AEG BOBW 94418759200

AEG EEB230010M 94032130002

Electrolux EHL40CN 94853341502

Electrolux EHL4WE 94853340701

Electrolux EHL4XCN 94853340602

Electrolux EKC6651W 94031314100

Electrolux EBL40XSW 94427115600

Electrolux EBL4SW 94427114700

Electrolux EKE6620-W 94031309600

Electrolux EOA5551AAW 94418425801

Electrolux EOA5551AAW 94418425800

Electrolux EON5631X 94031957500

Electrolux EON3602X 94031956900

Electrolux EON3605X 94031957200

Electrolux EON5450AAX 94031831001

Electrolux EON5410AAX 94031832300

Electrolux EOB5450AAX 94418418500



magazin online HORECA
Piese schimb / Accesorii / Consumabile / Reparații
Automatizări / Materiale Electrice

Electrolux EOG92102CX 94971340302
Electrolux EOB3000BAX 94971626500
Electrolux EOB3400DOX 94971627400
Electrolux EOB3000BAX 94971626503
Electrolux EOB1000AOW 94971600206
Electrolux EOB1000AOW 94971600207
Electrolux EHK10WE 94853343001
Electrolux EKE61004W R07 94031315900
Electrolux EON5631W R05 94031958800
Electrolux EON3602B R05 94031958100
Electrolux EON3602X R05 94031958300
Electrolux EON3605B R05 94031958400
Electrolux EON3605X R05 94031958600
Electrolux EOA5414AAK 94418456301
Electrolux EHL4XCN 94853345801
Electrolux EHL4XSW 94853345702
Electrolux EBL40SW 94427121202
Electrolux EON3000AAX 94972252400
Electrolux EOB3410DAX 94971631011
Electrolux EOB3000BAX 94971626506
Electrolux EOB3000BAX 94971626507
Electrolux EOB3000BAX 94971626504
Electrolux EOB3410COX 94971630909
Electrolux EON3410BAX 94972254104
Electrolux EOB7000X 94971637901
Electrolux EOB7000X 94971637900
Electrolux EOB3409WFW 94971635100
Electrolux EOB3311AOW 94971634402
Electrolux EOB3311AOW 94971634401
Electrolux EOB3311AAW 94971634202
Electrolux EKB200X 94971646101
Electrolux EOB3400COX 94971622805
Electrolux EOB2000AOW 94971622204
Electrolux EOB3000AOW 94971622404
Electrolux EOB3000AAX 94971623806
Electrolux EOR3420AOX 94971502104
Electrolux EOR3420AOW 94971501903
Electrolux EOB3400COX 94971622812
Electrolux EOB3311AAW 94971634204



magazin online HORECA
Piese schimb / Accesorii / Consumabile / Reparații
Automatizări / Materiale Electrice

Electrolux EOB3311AAW 94971634205
Electrolux EOB3311AOW 94971634404
Electrolux EOB3409WFW 94971635103
Electrolux EOB100JX 94971646400
Electrolux EOB1000AOW 94971600201
Electrolux EOB1000AOX 94971600308
Electrolux EKB100X 94971652101
Electrolux EOB3000AOW 94971622406
Electrolux EOB3000AOW 94971622407
Electrolux EOG2102AOX 94971340202
Electrolux EOB5450AAX 94418428902
Electrolux EOB5450AAX 94418450600
Electrolux EOB95450AV 94418447301
Electrolux EOA95551AV 94418453901
Electrolux EOA8000X 94418468601
Electrolux EOA5454AAX 94418474700
Electrolux EOA5450BAX 94418429601
Electrolux EOA5551AOZ 94418446102
Electrolux EOA5551AOZ 94418446100
Electrolux EOB5450AAX GCC 94418455700
Electrolux EOB95450AV 94418447302
Electrolux EOA5444AAX 94418476500
Electrolux EOA5450BAX 94418470602
Electrolux OPEA4554X 94418456003
Electrolux EOB5440AOV 94418452202
Electrolux EOB95450OX 94418441801
Electrolux EOB95450OX 94418441800
Electrolux EOB3410COX EA 94418441601
Electrolux EEA4545POX 94418432302
Electrolux EOB5417AOX 94418432000
Electrolux EOB5410BOX 94418431401
Electrolux EOB5450AOX 94418418802
Electrolux EOB5450AOX 94418418801
Electrolux EOB3430COX 94418417201
Electrolux EOB3311AOX 94418416102
Electrolux EOA5551AOX 94418414001
Electrolux EOB5430AOX 94418429101
Electrolux EOB3410COX 94418428800
Electrolux EOB5440AOX 94418418400



magazin online HORECA

**Piese schimb / Accesorii / Consumabile / Reparații
Automatizări / Materiale Electrice**

Electrolux EOB5341AOX 94418417701

Electrolux EOB55450AX 94418442203

Electrolux EOB500X 94418468200

Electrolux EOB5430AOX 94418429102

Electrolux EOB55351AX 94418442102

Electrolux EBKGL3SP 94427123801

Electrolux EHGL3SP 94853344204

Electrolux EBKGL3DSP 94427136701

Electrolux EHGL3DEEV 94853351300

Electrolux EOA95450AX 94418446600

Electrolux EOA95551AX 94418447100

Electrolux EOA95551BW 94418447200

Electrolux EKB500W 94418468300

Electrolux EBL4WE 94427120800

Electrolux EBL4XSW 94427121500

Electrolux EHL4SW 94853345100

Electrolux EHL4CN 94853345201

Electrolux EHL40CN 94853345501

Electrolux EHL4XWE 94853345601

Electrolux EHL40XWE 94853345901

Electrolux EBL40SW 94427121201

Electrolux EOB5441AAV 94418446000

Electrolux EOB3430COK 94418417302

Electrolux EOA5551AOW 94418413902

Electrolux EOB5450AAV 94418429000

Electrolux EOB5351AAW 94418417802

Electrolux EOB3430COW 94418417400

Electrolux EOA5551AOK 94418413800

Electrolux EOA5551AAX 94418413700

Electrolux EOA3331AAX 94418411900

Electrolux EHK12WE 94853343402

Electrolux EHK13SW 94853343301

Electrolux EHK13SW 94853343302

Electrolux EHK10SW 94853343100

Electrolux EHK10SW 94853343101

Electrolux EHK1SW 94853342900

Electrolux EHL23BR 94853342500

Electrolux EHL23BR 94853342501

Electrolux EHL2SW 94853342001



magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații
Automatizări / Materiale Electrice

Electrolux EHL2WE 94853341900
Electrolux EHL40XWE 94853341002
Electrolux EHL4CN 94853340902
Electrolux EHL4SW 94853340801
Electrolux EHL4WE 94853340702
Electrolux EHL4XCN 94853340603
Electrolux EHL4XCN 94853340601
Electrolux EHL4XSW 94853340502
Electrolux EHL4XCN 94853340600
Electrolux EBL20SW 94427116300
Electrolux EBL20CN 94427116400
Electrolux EBL20WE 94427116200
Electrolux EBL40XCN 94427115701
Electrolux EBL2WE 94427115901
Electrolux EBL2WE 94427115900
Electrolux EBL4XCN 94427115401
Electrolux EBL4XWE 94427115201
Electrolux EOB3630X EU R05 94418272700
Electrolux EKC63004W R07 94031316100
Electrolux EOB 6637 X 94418266800
Electrolux EKE 6654 W 94031312000
Electrolux EBGL30DSP 94427135900
Electrolux EBKGL3DCN 94427136600
Electrolux EHGL3CN 94853344305
Electrolux EOB1000AOX 94971600301
Electrolux EOB1000AOW 94971600200
Electrolux EHGL3XCN 94853344105
Electrolux EHGL30XDSP 94853351100
Electrolux EBKGL3XDCN 94427136401
Electrolux EKC63004W 60P 94031316100
Electrolux EKC63307X 61P 94031316300
Electrolux EHL20CN 94853343601
Electrolux EHK12WE 94853343403
Electrolux EHL23BR 94853342503
Electrolux EBL2SW 94427116002
Electrolux EBL2WE 94427122002
Electrolux EBL2SW 94427122100
Electrolux EBL20CN 94427122500
Electrolux EHL2XWE 94853347201



magazin online HORECA

**Piese schimb / Accesorii / Consumabile / Reparații
Automatizări / Materiale Electrice**

Electrolux EHK1-2WE 94853348300
Electrolux EHL2-3WE 94853347502
Electrolux EHL20CN 94853347002
Electrolux EHGL30XCN 94853344500
Electrolux EHGL30XSP 94853344400
Electrolux EHGL3XSP 94853344001
Electrolux EHGL30SP 94853344600
Electrolux EBKGL3XSP 94427120101
Electrolux EBKGL3XSP 94427120100
Electrolux EBGL3XCN 94427120002
Electrolux EBGL30SP 94427124000
Electrolux EBKGL3XCN 94427120201
Elektro Helios SU6030X 94971625300
Elektro Helios SU6030 94971625205
Husqvarna QCE5015W 94418224801
Husqvarna QCE5227X 94418224300
Husqvarna QCE5225W 94418224102
Husqvarna QCE5225W 94418224100
Husqvarna QCE5228X 94418222800
Husqvarna QCE5015W 94418224802
John Lewis JLBIO5611 94418216700
Lamona LAM3208 94971610900
Philco POB79 94418217500
Progress PHD34100X 94972255301
Rosenlew ROB35861XK 94971628909
Rosenlew ROB35861XK 94971628906
Rosenlew ROB35861WK 94971628805
Rosenlew ROB35861WK 94971628800
Rosenlew ROB20601WK 94971628704
Rosenlew ROB20601WK 94971628705
Rosenlew ROB35861WK 94971628810
Voss IEL7100-HV 94418224602
Voss IEL7100-HV 94418224601
Voss IEL7101-RF 94418226602
Voss IEL7101-RF 94418226600
Voss IEL7001-RF 94418225800
Voss IEL7000-RF 94418225700
Voss IEL6000-HV 94418225401
Voss IEL640RF 94418232700



magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații
Automatizări / Materiale Electrice

Voss IEL6100-RF 94418224502
Voss IEL7000-RF 94418225702
Voss IEL7000-HV 94418225602
Voss IEL6000-HV 94418225402
Voss IEL7001-HV 94418225903
Voss IEL6000-RF 94418225503
Voss IEL700HV 94418233200
Voss IEL700XHV 94418232900
Zanker KOU55602XK 94972253803
Zanker KOB55602XK 94971630805
Zanker KOU55602XK 94972253806
Zanker KOU65902XK 94972255801
Zanussi ZOB35806XK 94971502504
Zanussi ZOB35602XK 94971620101
Zanussi ZOB35602XK 94971620100
Zanussi ZOB35806XK 94971502501
Zanussi ZOB30601XK 94971620000
Zanussi ZOB35806XK 94971502505
Zanussi ZOB30601XK 94971625402
Zanussi ZOU30601DA 94972251300
Zanussi ZOU30602XK 94972250800
Zanussi ZOB35602XK 94971620106
Zanussi ZOU35802XK 94972250903
Zanussi ZOU30602XK 94972250804
Zanussi ZOU30602XK 94972250801
Zanussi ZOB30601XK 94971620004
Zanussi ZOB35602XK 94971620102
Zanussi ZOU30601DA 94972251303
Zanussi ZOU35802XK 94972250904
Zanussi ZOU30602XK 94972250805
Zanussi ZOB30601XK 94971620003
Zanussi ZOU35802XK 94972250905
Zanussi ZOB35602XK 94971620105
Zanussi ZOB35602XK 94971620104
Zanussi ZOU35631XA 94972251503
Zanussi ZOU35632XA 94972251703
Zanussi ZOU30602XK 94972250803
Zanussi ZOU30602XK 94972250807
Zanussi ZOU35802XK 94972250908

magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații
Automatizări / Materiale Electrice

Zanussi ZOB30601XK 94971620005
Zanussi ZOB35602XK 94971620108
Zanussi ZOB32702XD 94971625609
Zanussi ZOB65802XK 94971653601
Zanussi ZOB32702WK 94971631908
Zanussi ZOB30601WK 94971631802
Zanussi ZOB32702XD 94971625605
Zanussi ZOU20301WK 94972260406
Zanussi ZOB32702XD 94971625608
Zanussi ZOB32702BK 94971629308
Zanussi ZOB32702WK 94971631902
Zanussi ZOG521317X 94971340000
Zanussi ZOA35752XD 94971692209
Zanussi ZOB35806XK 94971502503
Zanussi ZOG21317XK 94971340102
Zanussi ZOB30601WK 94971631800
Zanussi ZOU20301XK 94972260501
Zanussi ZOU20301XK 94972260500
Zanussi ZOU20301WK 94972260402
Zanussi ZOU20301XK 94972260502
Zanussi ZOU30602XK 94972250806
Zanussi ZOU35802XK 94972250907
Zanussi ZOU35802XK 94972250906
Zanussi ZOB35602XK 94971620107
Zanussi ZOU35802XK 94972250901
Zanussi ZOB35806XK 94971502500
Zanussi ZOU35802XK 94972250900
Zanussi ZOB35805XK 94971502400

