



magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice

**Termostat reglabil cuptor 50-304°C sonda Ø4x100mm capilar 830mm  
ZANUSSI 5611490011 EGO 55.17062.420 #COK202ZN**

Fara TVA: 84,03 Lei

Pret cu TVA: 100,00Lei

Termostat reglabil cuptor 50-304°C sonda Ø4x100mm capilar 830mm ZANUSSI 5611490011 EGO 55.17062.420 #COK202ZN

Marja de temperatura: 50-304°C

Dimensiuni sonda: Ø4x100mm

Lungime capilar: 830mm

Ax:24mm

Contacte: 2 contacte

Cod original: 3890770047, 3890770245, 55.17062.420, 5611490011

Compatibil cu:

3890770047, 3890770245, 5517062420, 55.17062.420, 5611490011

AEG 41056VI-M 94031311400

AEG 41016VI-WN R05 94031313300

AEG 41056VI-MN 94031313400

AEG 41056VI-MN 66L 94031315600

AEG 41016VI-WN 24T 94031315501

AEG 41056VI-MN 24T 94031317301

AEG 41016VI-WN 94031315502

AEG 41056VI-MN 94031317302

AEG 41056VI-MN 94031319400

AEG 41016VI-WN 94031319000

AEG BE4314021M 94418702600

AEG BE2000201M 94418599301

AEG BE4013021M 94418571000

AEG BE3013021M 94418589201

AEG BE4313091M 94418731500

AEG BE4003001M 94418588201

AEG BE3003001M 94418588100

AEG BE4313091M 94418570000

AEG BE3013021M 94418589200

AEG BE4013021M 94418589300



magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice

AEG BE4313091M 94418589101  
AEG BE3003001M 94418588101  
AEG BE3003001M 94418573500  
AEG BE3013021M 94418570800  
AEG BE3003001D 94418573400  
AEG BE4313091M 94418589100  
AEG BE4013021M 94418731300  
AEG BE4003001M 94418574200  
AEG BE4013021M 94418589301  
AEG BE3000021M 94418711001  
AEG BE3003501M 94418731600  
AEG Competence E 4001-4M AEG-Nordic 94032008300  
AEG Competence E 4401-4W AEG-Nordic 94032008800  
AEG E3051-4-D 94031694700  
AEG E4101-4-M EURO 94032010600  
AEG E4001-4-M 94032012000  
AEG E4101-4-W 94032012300  
AEG E4101-4-M 94032012400  
AEG E42010-4-M 94032012600  
AEG E43010-4-M 94032012700  
AEG E4106-4-M (IND.) 94032012800  
AEG E43013-4-M 94032013800  
AEG E41065-4-M 94032014800  
AEG E30512-4-M 94032017000  
AEG E33512-4-D 94032017100  
AEG E43012-4-D 94032018000  
AEG E43012-4-M 94032018200  
AEG E32003-4-M 94031692000  
AEG E30510-4-M R05 94032031200  
AEG E3101-4-M EURO 94032010400  
AEG E31510-4-M DE R07 94031699800  
AEG E31560-4-M R07 94032034600  
AEG E30002-4-M 94032016100  
AEG E30002-4-W 94032016000  
AEG E30003-4-M 94032016400  
AEG E3000-4-AL 94032011600  
AEG E3000-4-D 94032011200  
AEG E3000-4-M 94032011500  
AEG E31002-4-M 94032016700



magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice

AEG E3101-4-M EU R07 94031699100  
AEG E31510-5-M DE R08 94032044100  
AEG E3351-5-D DE R08 94032038400  
AEG E33512-5-D EU(ML) 94032046501  
AEG E31510-5-M DE R08 94032044101  
AEG E31510-5-M 94032044102  
AEG E31560-5-M 94032044202  
AEG E3151-7-M 94032060400  
AEG E20223M 05I 94031404600  
AEG E20228M 55I 94031404900  
AEG E1000-4-B 94032010900  
AEG E1000-4-M 94032011000  
AEG EE3313091M 94032119500  
AEG EE3313031M 94032117001  
AEG EE3313091W 94032119600  
AEG EE4013031M 94032112701  
AEG EE3313091W 94032111701  
AEG EE3313091M 94032111600  
AEG EE4013021M 94032117700  
AEG EE4013031M 94032102600  
AEG EE3313091W 94032111700  
AEG EE3313031M 94032117000  
AEG EE4313091M 94032119800  
AEG EE4003011M 94032105400  
AEG EE4003011M 94032111301  
AEG EE3313091M 94032111601  
AEG EE3313091W 94032100200  
AEG EE3313091M 94032100100  
AEG EE4013031M 94032117800  
AEG EE4313091M 94032111801  
AEG EE4013031M 94032112700  
AEG EE4313291M 94032119900  
AEG EE3314031M 94032115800  
AEG EE4313091M 94032100600  
AEG EE4313091M 94032111800  
AEG EE3013021M 94032101800  
AEG EE3013021W 94032101900  
AEG EE1000001M 94032114901  
AEG EE3013021W 94032112601



magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice

AEG EE3003011D 94032113000  
AEG EE3000011M 94032112901  
AEG EE2003021M 94032115601  
AEG EE3013021M 94032112501  
AEG EE3013021D 94032112300  
AEG EE3013031M 94032101700  
AEG EE3003021M 94032112201  
AEG EE3000021D 94032111901  
AEG EE3013021W 94032112600  
AEG EE3003021M 94032101500  
AEG EE3003011D 94032104600  
AEG EE3000021W 94032112101  
AEG EE3003011W 94032104800  
AEG EE2000021M 94032115301  
AEG EE3013021D 94032101600  
AEG EE3003031M 94032116501  
AEG EE3013031M 94032112400  
AEG EE3000021M 94032112001  
AEG EE3003011M 94032111201  
AEG EE3013021M 94032112500  
AEG EE3013021D 94032112301  
AEG EE3013031M 94032112401  
AEG EE3003011M 94032104700  
AEG EE3003021M 94032112200  
AEG EE3003031M 94032116500  
AEG EE2000201M 94032115101  
AEG EE2000001M 94032115501  
AEG EE3003011W 94032113100  
AEG EE3003011M 94032111200  
AEG EE1300351X 94032121800  
AEG EE3013521M 94032120300  
AEG BE3003001M 94418700501  
AEG BE3013021M 94418598401  
AEG BE3003001M 94418587201  
AEG BC3303001M 94418595001  
AEG BE3003001M 94418586703  
AEG EE3003021W 94032116900  
AEG EE3003021D 94032116800  
AEG EE3013021M 94032114801



magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice

AEG EE3003021D 94032116801  
AEG EE3003021W 94032116901  
AEG BC3303001M 94418714500  
AEG BC3303501M 94418737800  
AEG BE3003001M 94418587202  
AEG BE3013021M 94418589202  
AEG BE3003001M 94418588102  
AEG BE1003001M 94418599202  
AEG BE3003001M 94418595202  
AEG BC200320WM 94418724301  
AEG BE3003501M 94418731601  
AEG BC3303501M 94418737801  
AEG BE300300MM 94418731901  
AEG BE3003001W 94418589602  
AEG E30510-4-M DE R07 94031699700  
AEG EE3000021M 94032109400  
AEG E30510-6-M 94032062200  
AEG EE2000001M 94032115100  
AEG EE3000011M 94032112900  
AEG EE2000021D 94032115200  
AEG EE2000021M 94032115300  
AEG EE4000011M 94032105300  
AEG EE3000011M 94032104200  
AEG EE3000021M 94032112000  
AEG BE2000201M 94418599300  
AEG BE3000021M 94418711000  
AEG EE3000021M 94032101300  
AEG E4000-5-LG 94032037601  
AEG EE2000001M 94032115500  
AEG E3051-4-W DE R07 94031699400  
AEG E32003-4-M R05 94032019700  
AEG E3051-7-M 94032060200  
AEG EE3013081M 94032110200  
AEG BE3013021M 94418585500  
AEG EE3013021M 94032109500  
AEG E31552-5-D EU(ML) 94032051700  
AEG E31552-5-D EU(ML) 94032051701  
AEG E31552-5-W EU(ML) 94032051800  
AEG E31552-5-W EU(ML) 94032051801



magazin online HORECA  
Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice

AEG E31560-5-M DE R08 94032044201  
AEG E33512-4-W 94032017200  
AEG E33512-4-M 94032017300  
AEG E42012-4-W 94032017800  
AEG JEH45312B R05 94031814100  
AEG JEH45312W R05 94031814000  
AEG JEH55001E R05 94031814300  
AEG JEH13001E R05 94031812800  
AEG JEH34002E R05 94031813700  
AEG BE2003001M 94418599402  
AEG ECK456220M 94032134100  
AEG BE300300MM 94418740200  
AEG EE3003011M 94032111202  
AEG EE3013021W 94032112602  
AEG EE3013021D 94032112302  
AEG EE3003021W 94032116902  
AEG EHBZDB 94032121401  
AEG EHBZDM 94032121501  
AEG EEB351010M 94032130400  
AEG EES35111XM 94032131000  
AEG BE3002021M 94418587902  
AEG BE400302WM 94418739201  
AEG BES35111XM 94418771000  
AEG BCS45131XM 94418772101  
AEG BES331010M 94418781500  
AEG BEK101010M 94418781301  
AEG BCK452210M 94418788100  
AEG EHBZDW 94032121601  
AEG BE430442SW 94418724701  
AEG BEB351010M 94418797800  
AEG BCS452210W 94418786900  
AEG EEB342010M 94032132300  
AEG E3351-4-W DE R07 94032034800  
AEG E33512-5-W EU(ML) 94032046601  
AEG E33512-5-W EU(ML) 94032046602  
AEG 41056VH-MN 94031313200  
AEG E4107-5-M 94032051104  
AEG EE2003061M 94972254200  
AEG EE3003061M 94972254300



*magazin online HORECA*

**Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice**

AEG BE4003001M 94418700601  
AEG BE4003001M 94418700600  
AEG EE2003061M 94972254203  
AEG BE3003061M 94971638000  
AEG EE2003061M 94972254201  
AEG EE3003061M 94972254304  
AEG EE2000221W 94972255000  
AEG EE2003061M 94972254205  
AEG EE3003061M 94972254307  
AEG EE3003061M 94972254301  
AEG EE3003061M 94972254305  
AEG EE2003061M 94972254204  
AEG EE3003061M 94972254306  
AEG BES33101ZM 94971652402  
AEG EES33101ZM 94972255502  
AEG BES33101ZM 94971652400  
AEG BES33101ZM 94971652401  
AEG GG112102M 94971340400  
AEG GG112102M 94971340401  
AEG BE3303071M 94418593402  
AEG EE3013021M 94032114802  
AEG BE3013421W 94418594103  
AEG BE3013021M 94418598402  
AEG BE3013521M 94418737001  
AEG BE301352NM 94418737401  
AEG BEB351110B 94418781100  
AEG BCS331150M 94418780600  
AEG BE3013021M 94418590901  
AEG BE3303071M 94418593401  
AEG BCE451350M 94418780101  
AEG EEB355020M 94032134900  
AEG BEB355020M 94418818800  
AEG BEE455010M 94418807400  
AEG BEB351010M 94418770501  
AEG BEB351010M 94418770500  
AEG BEB351010M 94418781701  
AEG BEB351010M 94418781700  
AEG BEK351110M 94418784200  
AEG BOBZDM 94418760200



magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice

AEG ED320 94032133800  
AEG BEB351010M 94418770502  
AEG EEB351010D 94032130502  
AEG EEB351010M 94032130402  
AEG EES35111XM 94032131002  
AEG BCE451010M 94418771802  
AEG BES351110M 94418780501  
AEG BEK35101YM 94418770702  
AEG BEB351010M 94418781702  
AEG BES351110M 94418784102  
AEG BCS451010M 94418782102  
AEG EES23101ZM 94972255400  
AEG EES33101ZM 94972255501  
AEG EES33101ZM 94972255500  
AEG EE3003061M 94972254303  
AEG EE0300306M 94972254800  
AEG EE3003061M 94972254309  
AEG EE0300306M 94972254801  
AEG EE3003061M 94972254308  
AEG BCK452210M 94418771900  
AEG BCK45221YM 94418772000  
AEG JB094C7 94971653300  
AEG JH094C7 94972255900  
AEG BCK452210M 94418771901  
AEG E30512-4-D R05 94032020700  
AEG E30512-4-W R05 94032020800  
AEG E3051-4-W R05 94032024400  
AEG E30532-4-M R05 94032032500  
AEG E4001-4-W R05 94032025500  
AEG E4106-4-M R05 94032026300  
AEG E4106-4-M R05 94032032700  
AEG E41065-4-M R05 94032031800  
AEG E43012-4-W R05 94032022000  
AEG E43013-4-M R05 94032022400  
AEG JEB55301A R05 94418406000  
AEG JEB55301E R05 94418405900  
AEG JEH55301E R05 94031814500  
AEG E30003-4-W R05 94032019900  
AEG E30002-4-W R05 94032020200





*magazin online HORECA*

**Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice**

AEG E31002-4-D R05 94032020400  
AEG E3000-4-W R05 94032023800  
AEG E5701-4-A R05 94032033000  
AEG E43012-4-M GR R07 94032036400  
AEG E41065-5-M R08 94032045300  
AEG E4001-5-W DE R08 94032039200  
AEG E40010-5-M DE R08 94032044300  
AEG E40015-5-M R08 94032045200  
AEG 30006VE-WN 94031312600  
AEG 31016FF-W 94031311900  
AEG 41016VH-WN 94031313100  
AEG E1000-5-D DE R08 94032049000  
AEG EHBZB 94853338400  
AEG EHBM 94853338201  
AEG EHAW 94853338000  
AEG BOGZB 94427108800  
AEG BOBZM 94427108600  
AEG BOBZB 94427108500  
AEG BOBB 94427108200  
AEG BE4003001M 94418581400  
AEG EE4000011M 94032113200  
AEG BE5431302B 94418721200  
AEG BE430442SM 94418724600  
AEG BE301352NM 94418737400  
AEG BE400302WM 94418739200  
AEG BE3002421W 94418592601  
AEG BE401342PM 94418703502  
AEG BE3003001M 94418702001  
AEG BE3003001M 94418702000  
AEG BE4003001M 94418701901  
AEG BE4003001M 94418701900  
AEG BE3002021M 94418587901  
AEG BE3002421B 94418587402  
AEG BE3003001M 94418595201  
AEG EHBZM 94032118600  
AEG EE3003011M 94032115701  
AEG EE3013021M 94032114201  
AEG EHBZDM 94032121500  
AEG BE3013021M 94418590900



magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice

AEG BE3002021M 94418587900

AEG BE3003001M 94418595200

AEG BC3003001M 94418594900

AEG BE3002401M 94418573100

AEG BE3002421M 94418570300

AEG BE3003001M 94418587200

AEG BE3003001M 94418587100

AEG BE3003001M 94418586701

AEG BE4003001M 94418584900

AEG BE3013421M 94418584500

AEG EE3003011M 94032115700

AEG EE3000021M 94032114700

AEG EE3013021M 94032114800

AEG EE3000421W 94032114500

AEG EE3013021M 94032114200

AEG EE3000421W 94032107700

AEG EE3002411M 94032104400

AEG BE4013021M 94418585600

AEG BE3003001M 94418700500

AEG BE3003021B 94418599700

AEG BE4013021M 94418598500

AEG BE3013021M 94418598400

AEG BE3003021M 94418598300

AEG BE3013421M 94418598100

AEG BE3013021M 94418597300

AEG BE3013421W 94418594100

AEG BE3303071M 94418593400

AEG BE3003021M 94418592700

AEG BE3003021W 94418592800

AEG BE3013021M 94418591100

AEG BE301302PM 94418703600

AEG BE401342PM 94418703500

AEG EHBZM 94853338502

AEG EHBZB 94853338402

AEG BOBZM 94427108601

AEG BOBZB 94418715400

AEG BE3002401B 94418700201

AEG BE3002021B 94418599801

AEG BE3003021B 94418599701



magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice

AEG BE4013021M 94418598501  
AEG BE3003021M 94418598301  
AEG BE3013021M 94418597301  
AEG BC301302NM 94418718000  
AEG BCK456220M 94418810700  
AEG BCE455020M 94418809500  
AEG BCK452210M 94418785400  
AEG BCK452210M 94418771902  
AEG BEK431110W 94418793500  
AEG BEK451110M 94418793600  
AEG BD320 94418803800  
AEG BER451110B 94418803600  
AEG BEK451210M 94418795402  
AEG BEK431010M 94418801801  
AEG E1000-5-W DE R08 94032049100  
AEG E30510-5-M DE R08 94032044000  
AEG E31560-5-M DE R08 94032044200  
AEG E41010-5-M DE R08 94032044400  
AEG E4101-5-A DE R08 94032048500  
AEG E4101-5-W DE R08 94032039700  
AEG E4106-5-M DE R08 94032041000  
AEG 41016VI-WN 24T 94031315500  
AEG E41010-5-M DE R08 94032044401  
AEG E43013-4-M R07 94032022401  
AEG E6871-4-M R05 94032033500  
AEG E6871-4-M R07 94032033500  
AEG E4106-5-M DE R08 94032041001  
AEG E41065-5-M R08 94032045301  
AEG E31552-5-M 94032051903  
AEG E4001-7-M 94032060900  
AEG E40015-7-M 94032061900  
AEG B6871-4-A R05 94418528400  
AEG E41065-5-M 94032045303  
AEG E40015-5-M 94032045201  
AEG E41065-5-M 94032045302  
AEG E40010-5-M 94032044301  
AEG E4106-5-M 94032041003  
AEG E4101-7-M DE 94032061201  
AEG E4106-5-M 94032041002



magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice

AEG Competence E 4001-4W AEG-Nordic 94032008200  
AEG Competence E 4001-4A AEG-Nordic 94032008400  
AEG Competence E 4401-4B AEG-Nordic 94032008900  
AEG 40006 VE W (CH) 94031311800  
AEG Competence E 31915-4A Nordic 94032019000  
AEG Competence 10006 FFW CH 94031311700  
AEG Competence E 3000-4B Euro 94032010100  
AEG Competence E 3000-4M Euro 94032010200  
AEG Competence E 3000-4W Euro 94032010300  
AEG BE4003001M 94418588202  
AEG BE4003001M 94418700602  
AEG EE4003011M 94032111300  
AEG BE4003001M 94418588200  
AEG 41056VI-MN 66L 94031317300  
AEG 40036VI-WN 24T 94031315000  
AEG 41056VI-MN 24T 94031317300  
AEG E4001-5-M 94032039401  
AEG E20223D 05I 94031405100  
AEG E30915-4-M R05 94032013500  
AEG E30512-4-M R05 94032020900  
AEG E3051-4-AL R05 94032024600  
AEG E4001-4-M R05 94032025700  
AEG E40015-4-M R05 94032031000  
AEG E43012-4-M R05 94032022100  
AEG E20228M R05 94031405600  
AEG E30003-4-M R05 94032020000  
AEG E30002-4-M R05 94032020300  
AEG E1000-4-M R05 94032023500  
AEG E3000-4-AL R05 94032024100  
AEG E4001-5-M DE R08 94032039400  
AEG E4001-5-A DE R08 94032048400  
AEG 41016VH-WN 71L 94031315300  
AEG 41016VI-WN 66L 94031315500  
AEG 61016VI-AN 94031313600  
AEG E3050-5-M DE R08 94032049400  
AEG E3051-5-M DE R08 94032038100  
AEG 61016VI-AN 24T 94031315800  
AEG E31552-5-M EU(ML) 94032051900  
AEG E31552-5-M EU(ML) 94032051901



magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice

AEG E33512-5-M EU(ML) 94032046701

AEG E4101-5-M DE R08 94032039801

AEG E33512-5-M EU(ML) 94032046702

AEG EHAB 94853337902

AEG BOBB 94418715100

AEG BE2000001M 94418700801

AEG EE3000021M 94032114701

AEG EE3000421W 94032114502

AEG EE4000011M 94032113201

AEG BC300000MM 94418752400

AEG EE3013031M 94032112402

AEG EE2000201M 94032115102

AEG EE2000001M 94032115502

AEG EE3000011M 94032112902

AEG EE4013031M 94032117801

AEG EE4313291M 94032119901

AEG EEB100010M 94032129901

AEG EEB230010M 94032130000

AEG EEB230010M 94032130001

AEG EEK23001YM 94032130100

AEG BE3000021M 94418711002

AEG BEB350010M 94418770301

AEG BOBW 94418759200

AEG EEB230010M 94032130002

Electrolux EHL40CN 94853341502

Electrolux EHL4WE 94853340701

Electrolux EHL4XCN 94853340602

Electrolux EKC6651W 94031314100

Electrolux EBL40XSW 94427115600

Electrolux EBL4SW 94427114700

Electrolux EKE6620-W 94031309600

Electrolux EOA5551AAW 94418425801

Electrolux EOA5551AAW 94418425800

Electrolux EON5631X 94031957500

Electrolux EON3602X 94031956900

Electrolux EON3605X 94031957200

Electrolux EON5450AAX 94031831001

Electrolux EON5410AAX 94031832300

Electrolux EOB5450AAX 94418418500



magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice

Electrolux EOG92102CX 94971340302  
Electrolux EOB3000BAX 94971626500  
Electrolux EOB3400DOX 94971627400  
Electrolux EOB3000BAX 94971626503  
Electrolux EOB1000AOW 94971600206  
Electrolux EOB1000AOW 94971600207  
Electrolux EHK10WE 94853343001  
Electrolux EKE61004W R07 94031315900  
Electrolux EON5631W R05 94031958800  
Electrolux EON3602B R05 94031958100  
Electrolux EON3602X R05 94031958300  
Electrolux EON3605B R05 94031958400  
Electrolux EON3605X R05 94031958600  
Electrolux EOA5414AAK 94418456301  
Electrolux EHL4XCN 94853345801  
Electrolux EHL4XSW 94853345702  
Electrolux EBL40SW 94427121202  
Electrolux EON3000AAX 94972252400  
Electrolux EOB3410DAX 94971631011  
Electrolux EOB3000BAX 94971626506  
Electrolux EOB3000BAX 94971626507  
Electrolux EOB3000BAX 94971626504  
Electrolux EOB3410COX 94971630909  
Electrolux EON3410BAX 94972254104  
Electrolux EOB7000X 94971637901  
Electrolux EOB7000X 94971637900  
Electrolux EOB3409WFW 94971635100  
Electrolux EOB3311AOW 94971634402  
Electrolux EOB3311AOW 94971634401  
Electrolux EOB3311AAW 94971634202  
Electrolux EKB200X 94971646101  
Electrolux EOB3400COX 94971622805  
Electrolux EOB2000AOW 94971622204  
Electrolux EOB3000AOW 94971622404  
Electrolux EOB3000AAX 94971623806  
Electrolux EOR3420AOX 94971502104  
Electrolux EOR3420AOW 94971501903  
Electrolux EOB3400COX 94971622812  
Electrolux EOB3311AAW 94971634204



*magazin online HORECA*  
**Piese schimb / Accesorii / Consumabile / Reparații**  
**Automatizări / Materiale Electrice**

Electrolux EOB3311AAW 94971634205  
Electrolux EOB3311AOW 94971634404  
Electrolux EOB3409WFW 94971635103  
Electrolux EOB100JX 94971646400  
Electrolux EOB1000AOW 94971600201  
Electrolux EOB1000AOX 94971600308  
Electrolux EKB100X 94971652101  
Electrolux EOB3000AOW 94971622406  
Electrolux EOB3000AOW 94971622407  
Electrolux EOG2102AOX 94971340202  
Electrolux EOB5450AAX 94418428902  
Electrolux EOB5450AAX 94418450600  
Electrolux EOB95450AV 94418447301  
Electrolux EOA95551AV 94418453901  
Electrolux EOA8000X 94418468601  
Electrolux EOA5454AAX 94418474700  
Electrolux EOA5450BAX 94418429601  
Electrolux EOA5551AOZ 94418446102  
Electrolux EOA5551AOZ 94418446100  
Electrolux EOB5450AAX GCC 94418455700  
Electrolux EOB95450AV 94418447302  
Electrolux EOA5444AAX 94418476500  
Electrolux EOA5450BAX 94418470602  
Electrolux OPEA4554X 94418456003  
Electrolux EOB5440AOV 94418452202  
Electrolux EOB95450OX 94418441801  
Electrolux EOB95450OX 94418441800  
Electrolux EOB3410COX EA 94418441601  
Electrolux EEA4545POX 94418432302  
Electrolux EOB5417AOX 94418432000  
Electrolux EOB5410BOX 94418431401  
Electrolux EOB5450AOX 94418418802  
Electrolux EOB5450AOX 94418418801  
Electrolux EOB3430COX 94418417201  
Electrolux EOB3311AOX 94418416102  
Electrolux EOA5551AOX 94418414001  
Electrolux EOB5430AOX 94418429101  
Electrolux EOB3410COX 94418428800  
Electrolux EOB5440AOX 94418418400



magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice

Electrolux EOB5341AOX 94418417701  
Electrolux EOB55450AX 94418442203  
Electrolux EOB500X 94418468200  
Electrolux EOB5430AOX 94418429102  
Electrolux EOB55351AX 94418442102  
Electrolux EBKGL3SP 94427123801  
Electrolux EHGL3SP 94853344204  
Electrolux EBKGL3DSP 94427136701  
Electrolux EHGL3DEEV 94853351300  
Electrolux EOA95450AX 94418446600  
Electrolux EOA95551AX 94418447100  
Electrolux EOA95551BW 94418447200  
Electrolux EKB500W 94418468300  
Electrolux EBL4WE 94427120800  
Electrolux EBL4XSW 94427121500  
Electrolux EHL4SW 94853345100  
Electrolux EHL4CN 94853345201  
Electrolux EHL40CN 94853345501  
Electrolux EHL4XWE 94853345601  
Electrolux EHL40XWE 94853345901  
Electrolux EBL40SW 94427121201  
Electrolux EOB5441AAV 94418446000  
Electrolux EOB3430COK 94418417302  
Electrolux EOA5551AOW 94418413902  
Electrolux EOB5450AAV 94418429000  
Electrolux EOB5351AAW 94418417802  
Electrolux EOB3430COW 94418417400  
Electrolux EOA5551AOK 94418413800  
Electrolux EOA5551AAX 94418413700  
Electrolux EOA3331AAX 94418411900  
Electrolux EHK12WE 94853343402  
Electrolux EHK13SW 94853343301  
Electrolux EHK13SW 94853343302  
Electrolux EHK10SW 94853343100  
Electrolux EHK10SW 94853343101  
Electrolux EHK1SW 94853342900  
Electrolux EHL23BR 94853342500  
Electrolux EHL23BR 94853342501  
Electrolux EHL2SW 94853342001





magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice

Electrolux EHL2WE 94853341900  
Electrolux EHL40XWE 94853341002  
Electrolux EHL4CN 94853340902  
Electrolux EHL4SW 94853340801  
Electrolux EHL4WE 94853340702  
Electrolux EHL4XCN 94853340603  
Electrolux EHL4XCN 94853340601  
Electrolux EHL4XSW 94853340502  
Electrolux EHL4XCN 94853340600  
Electrolux EBL20SW 94427116300  
Electrolux EBL20CN 94427116400  
Electrolux EBL20WE 94427116200  
Electrolux EBL40XCN 94427115701  
Electrolux EBL2WE 94427115901  
Electrolux EBL2WE 94427115900  
Electrolux EBL4XCN 94427115401  
Electrolux EBL4XWE 94427115201  
Electrolux EOB3630X EU R05 94418272700  
Electrolux EKC63004W R07 94031316100  
Electrolux EOB 6637 X 94418266800  
Electrolux EKE 6654 W 94031312000  
Electrolux EBGL30DSP 94427135900  
Electrolux EBKGL3DCN 94427136600  
Electrolux EHGL3CN 94853344305  
Electrolux EOB1000AOX 94971600301  
Electrolux EOB1000AOW 94971600200  
Electrolux EHGL3XCN 94853344105  
Electrolux EHGL30XDSP 94853351100  
Electrolux EBKGL3XDCN 94427136401  
Electrolux EKC63004W 60P 94031316100  
Electrolux EKC63307X 61P 94031316300  
Electrolux EHL20CN 94853343601  
Electrolux EHK12WE 94853343403  
Electrolux EHL23BR 94853342503  
Electrolux EBL2SW 94427116002  
Electrolux EBL2WE 94427122002  
Electrolux EBL2SW 94427122100  
Electrolux EBL20CN 94427122500  
Electrolux EHL2XWE 94853347201



*magazin online HORECA*

**Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice**

Electrolux EHK1-2WE 94853348300  
Electrolux EHL2-3WE 94853347502  
Electrolux EHL20CN 94853347002  
Electrolux EHGL30XCN 94853344500  
Electrolux EHGL30XSP 94853344400  
Electrolux EHGL3XSP 94853344001  
Electrolux EHGL30SP 94853344600  
Electrolux EBKGL3XSP 94427120101  
Electrolux EBKGL3XSP 94427120100  
Electrolux EBGL3XCN 94427120002  
Electrolux EBGL30SP 94427124000  
Electrolux EBKGL3XCN 94427120201  
Elektro Helios SU6030X 94971625300  
Elektro Helios SU6030 94971625205  
Husqvarna QCE5015W 94418224801  
Husqvarna QCE5227X 94418224300  
Husqvarna QCE5225W 94418224102  
Husqvarna QCE5225W 94418224100  
Husqvarna QCE5228X 94418222800  
Husqvarna QCE5015W 94418224802  
John Lewis JLBIO5611 94418216700  
Lamona LAM3208 94971610900  
Philco POB79 94418217500  
Progress PHD34100X 94972255301  
Rosenlew ROB35861XK 94971628909  
Rosenlew ROB35861XK 94971628906  
Rosenlew ROB35861WK 94971628805  
Rosenlew ROB35861WK 94971628800  
Rosenlew ROB20601WK 94971628704  
Rosenlew ROB20601WK 94971628705  
Rosenlew ROB35861WK 94971628810  
Voss IEL7100-HV 94418224602  
Voss IEL7100-HV 94418224601  
Voss IEL7101-RF 94418226602  
Voss IEL7101-RF 94418226600  
Voss IEL7001-RF 94418225800  
Voss IEL7000-RF 94418225700  
Voss IEL6000-HV 94418225401  
Voss IEL640RF 94418232700



magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice

Voss IEL6100-RF 94418224502  
Voss IEL7000-RF 94418225702  
Voss IEL7000-HV 94418225602  
Voss IEL6000-HV 94418225402  
Voss IEL7001-HV 94418225903  
Voss IEL6000-RF 94418225503  
Voss IEL700HV 94418233200  
Voss IEL700XHV 94418232900  
Zanker KOU55602XK 94972253803  
Zanker KOB55602XK 94971630805  
Zanker KOU55602XK 94972253806  
Zanker KOU65902XK 94972255801  
Zanussi ZOB35806XK 94971502504  
Zanussi ZOB35602XK 94971620101  
Zanussi ZOB35602XK 94971620100  
Zanussi ZOB35806XK 94971502501  
Zanussi ZOB30601XK 94971620000  
Zanussi ZOB35806XK 94971502505  
Zanussi ZOB30601XK 94971625402  
Zanussi ZOU30601DA 94972251300  
Zanussi ZOU30602XK 94972250800  
Zanussi ZOB35602XK 94971620106  
Zanussi ZOU35802XK 94972250903  
Zanussi ZOU30602XK 94972250804  
Zanussi ZOU30602XK 94972250801  
Zanussi ZOB30601XK 94971620004  
Zanussi ZOB35602XK 94971620102  
Zanussi ZOU30601DA 94972251303  
Zanussi ZOU35802XK 94972250904  
Zanussi ZOU30602XK 94972250805  
Zanussi ZOB30601XK 94971620003  
Zanussi ZOU35802XK 94972250905  
Zanussi ZOB35602XK 94971620105  
Zanussi ZOB35602XK 94971620104  
Zanussi ZOU35631XA 94972251503  
Zanussi ZOU35632XA 94972251703  
Zanussi ZOU30602XK 94972250803  
Zanussi ZOU30602XK 94972250807  
Zanussi ZOU35802XK 94972250908

magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice

Zanussi ZOB30601XK 94971620005  
Zanussi ZOB35602XK 94971620108  
Zanussi ZOB32702XD 94971625609  
Zanussi ZOB65802XK 94971653601  
Zanussi ZOB32702WK 94971631908  
Zanussi ZOB30601WK 94971631802  
Zanussi ZOB32702XD 94971625605  
Zanussi ZOU20301WK 94972260406  
Zanussi ZOB32702XD 94971625608  
Zanussi ZOB32702BK 94971629308  
Zanussi ZOB32702WK 94971631902  
Zanussi ZOG521317X 94971340000  
Zanussi ZOA35752XD 94971692209  
Zanussi ZOB35806XK 94971502503  
Zanussi ZOG21317XK 94971340102  
Zanussi ZOB30601WK 94971631800  
Zanussi ZOU20301XK 94972260501  
Zanussi ZOU20301XK 94972260500  
Zanussi ZOU20301WK 94972260402  
Zanussi ZOU20301XK 94972260502  
Zanussi ZOU30602XK 94972250806  
Zanussi ZOU35802XK 94972250907  
Zanussi ZOU35802XK 94972250906  
Zanussi ZOB35602XK 94971620107  
Zanussi ZOU35802XK 94972250901  
Zanussi ZOB35806XK 94971502500  
Zanussi ZOU35802XK 94972250900  
Zanussi ZOB35805XK 94971502400

