

magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice

## Rigleta conexiune 6 poli 40A 450V #550977

Fara TVA: 21,01 Lei

Pret cu TVA: 25,00Lei

Rigleta conexiune 6 poli 40A 450V #550977

number of poles 6

load max 40A

maximum voltage 450V

connection  $\varnothing 6\text{mm}^2$  / F6.3

temperature resistance 150°C

nominal cross section 6mm<sup>2</sup>

version with ground lug

Compatibil :

Baron, Coffee Queen, Cookmax, Electrolux, Mareno, Olis, Silko, Tecnoinox

Electrolux bain marie 200264 314-

Electrolux bain marie 203006 301-07122003

Electrolux bain marie 213006 301-31012005

Electrolux bain marie 223006 301-07122003

Electrolux bain marie 223008 520-30061995

Electrolux electric bain marie 168167 810-31121999

Electrolux electric bain marie 168168 810-31121999

Electrolux electric bain marie 168567 810-19122005

Electrolux electric bain marie 168568 810-19122005

Electrolux electric bain marie 168767 810-01092000

Electrolux electric bain marie 168768 810-30111999

Electrolux electric bain marie 168967 810-25072005

Electrolux electric bain marie 168968 810-25072005

Electrolux electric bain marie 178158 12122005-

Electrolux electric bain marie 178159 16012006-

Electrolux electric bain marie 178160

Electrolux electric bain marie 178458

Electrolux electric bain marie 178758

Electrolux electric bain marie 178759

Electrolux electric bain marie 178760

Electrolux electric bain marie 210264 12122005-

Electrolux electric bain marie 220264 12122005-

Electrolux frying pan 168036 001-



*magazin online HORECA*

**Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice**

Electrolux frying pan 168037 001-  
Electrolux frying pan 168436 001-19122005  
Electrolux frying pan 168437 001-19122005  
Electrolux frying pan 168636 001-01092000  
Electrolux frying pan 168637 001-01092000  
Electrolux frying pan 168836 001-25072005  
Electrolux frying pan 168837 001-25072005  
Electrolux electric frying pan 178104  
Electrolux electric frying pan 178105  
Electrolux electric frying pan 178404  
Electrolux electric frying pan 178405  
Electrolux electric frying pan 178704  
Electrolux electric frying pan 178705  
Electrolux electric frying pan 285517  
Electrolux electric frying pan 285757 9809-  
Electrolux griddle 168082 810-  
Electrolux griddle 168083 810-  
Electrolux griddle 168084 810-31121999  
Electrolux griddle 168085 810-  
Electrolux griddle 168086 810-  
Electrolux griddle 168087 810-  
Electrolux griddle 168088 810-31121999  
Electrolux griddle 168089 810-  
Electrolux griddle 168090 810-31121999  
Electrolux griddle 168091 810-  
Electrolux griddle 168092 810-  
Electrolux griddle 168093 810-31121999  
Electrolux griddle 168095 04022001-  
Electrolux griddle 168882 810-25072005  
Electrolux griddle 168883 810-25072005  
Electrolux griddle 168884 810-25072005  
Electrolux griddle 168885 810-25072005  
Electrolux griddle 168886 810-25072005  
Electrolux griddle 168887 810-25072005  
Electrolux griddle 168888 810-25072005  
Electrolux griddle 168889 810-25072005  
Electrolux griddle 168890 810-25072005  
Electrolux griddle 168891 810-25072005  
Electrolux griddle 168892 810-25072005



*magazin online HORECA*

**Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice**

Electrolux griddle 168893 810-25072005  
Electrolux griddle 168895 04022001-25072005  
Electrolux griddle 285505  
Electrolux griddle 285506  
Electrolux griddle 285507  
Electrolux griddle 285508  
Electrolux griddle 285509  
Electrolux griddle 285510  
Electrolux griddle 285745 9809-  
Electrolux griddle 285746 9809-31121999  
Electrolux griddle 285747 9809-  
Electrolux griddle 285748 9809-  
Electrolux griddle 285749 9809-  
Electrolux griddle 285750 9809-  
Electrolux electric range 168009 810-31121999  
Electrolux electric range 168010 810-31121999  
Electrolux electric range 168011 810-31121999  
Electrolux electric range 168012 810-31121999  
Electrolux electric range 168409 810-19122005  
Electrolux electric range 168410 810-19122005  
Electrolux electric range 168411 810-30111999  
Electrolux electric range 168412 810-19122005  
Electrolux electric range 168609 810-01092000  
Electrolux electric range 168610 810-30111999  
Electrolux electric range 168611 810-29121999  
Electrolux electric range 168612 810-01092000  
Electrolux electric range 168809 810-25072005  
Electrolux electric range 168810 810-25072005  
Electrolux electric range 168811 810-25072005  
Electrolux electric range 168812 810-25072005  
Electrolux electric range 178013 18072005-30111999  
Electrolux electric range 178014 18072005-  
Electrolux electric range 178035  
Electrolux electric range 178036  
Electrolux electric range 178313  
Electrolux electric range 178314  
Electrolux electric range 178613  
Electrolux electric range 178614  
Electrolux electric range 178635



*magazin online HORECA*

**Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice**

Electrolux electric range 178636  
Electrolux electric range 178816  
Electrolux electric range 178818  
Electrolux electric range 178820  
Electrolux electric range 178822  
Electrolux electric range 178829  
Electrolux electric range 178831  
Electrolux electric range 178833  
Electrolux electric range 178835  
Electrolux electric range 285500  
Electrolux electric range 285501  
Electrolux electric range 285740 9809-  
Electrolux electric range 285741 9809-  
Electrolux electric range + oven 62303  
Electrolux electric range + oven 168013 810-31121999  
Electrolux electric range + oven 168023 844-  
Electrolux electric range + oven 168024 844-31121999  
Electrolux electric range + oven 168025 844-  
Electrolux electric range + oven 168026 844-  
Electrolux electric range + oven 168203 022-25072005  
Electrolux electric range + oven 168206 022-  
Electrolux electric range + oven 168413 810-19122005  
Electrolux electric range + oven 168613 810-01092000  
Electrolux electric range + oven 168813 810-25072005  
Electrolux electric range + oven 178015 18072005-  
Electrolux electric range + oven 178016 18072005-  
Electrolux electric range + oven 178017 19092005-  
Electrolux electric range + oven 178018 18072005-30111999  
Electrolux electric range + oven 178019 19092005-30111999  
Electrolux electric range + oven 178020 18072005-30111999  
Electrolux electric range + oven 178027  
Electrolux electric range + oven 178028  
Electrolux electric range + oven 178037  
Electrolux electric range + oven 178316  
Electrolux electric range + oven 178317  
Electrolux electric range + oven 178318  
Electrolux electric range + oven 178319  
Electrolux electric range + oven 178618  
Electrolux electric range + oven 178627



*magazin online HORECA*

**Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice**

Electrolux electric range + oven 178637  
Electrolux electric chip scuttle 285513 9809-  
Electrolux electric chip scuttle 285753 9809-  
Electrolux electric chip scuttle 285822 9809-  
Electrolux electric deep fryer 168052 810-  
Electrolux electric deep fryer 168057 810-31052000  
Electrolux electric deep fryer 168058 810-31052000  
Electrolux electric deep fryer 168059 810-31121999  
Electrolux electric deep fryer 168060 810-31052000  
Electrolux electric deep fryer 168061 810-31052000  
Electrolux electric deep fryer 168064 020-  
Electrolux electric deep fryer 168065 020-  
Electrolux electric deep fryer 168068 020-  
Electrolux electric deep fryer 168069 020-  
Electrolux electric deep fryer 168190 020-  
Electrolux electric deep fryer 168191 020-  
Electrolux electric deep fryer 168192 020-  
Electrolux electric deep fryer 168193 020-  
Electrolux electric deep fryer 168194 020-  
Electrolux electric deep fryer 168195 020-  
Electrolux electric deep fryer 168196 020-  
Electrolux electric deep fryer 168197 020-  
Electrolux electric deep fryer 168452 810-19122005  
Electrolux electric deep fryer 168457 810-31052000  
Electrolux electric deep fryer 168458 810-31052000  
Electrolux electric deep fryer 168459 810-19122005  
Electrolux electric deep fryer 168460 810-31052000  
Electrolux electric deep fryer 168461 810-31052000  
Electrolux electric deep fryer 168464 020-19122005  
Electrolux electric deep fryer 168465 020-19122005  
Electrolux electric deep fryer 168468 020-19122005  
Electrolux electric deep fryer 168469 020-19122005  
Electrolux electric deep fryer 168590 020-19122005  
Electrolux electric deep fryer 168591 020-19122005  
Electrolux electric deep fryer 168592 020-19122005  
Electrolux electric deep fryer 168593 020-19122005  
Electrolux electric deep fryer 168596 020-19122005  
Electrolux electric deep fryer 168597 020-19122005  
Electrolux electric deep fryer 168652 810-01092000



magazin online HORECA

Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice

Electrolux electric deep fryer 168657 810-30111999  
Electrolux electric deep fryer 168658 810-31052000  
Electrolux electric deep fryer 168659 810-01092000  
Electrolux electric deep fryer 168660 810-31052000  
Electrolux electric deep fryer 168661 810-31052000  
Electrolux electric deep fryer 168664 020-01092000  
Electrolux electric deep fryer 168665 020-01092000  
Electrolux electric deep fryer 168668 020-01092000  
Electrolux electric deep fryer 168669 020-01092000  
Electrolux electric deep fryer 168790 020-01092000  
Electrolux electric deep fryer 168791 020-01092000  
Electrolux electric deep fryer 168792 020-01092000  
Electrolux electric deep fryer 168793 020-01092000  
Electrolux electric deep fryer 168852 810-25072005  
Electrolux electric deep fryer 168857 810-31052000  
Electrolux electric deep fryer 168858 810-31052000  
Electrolux electric deep fryer 168859 810-25072005  
Electrolux electric deep fryer 168860 810-31052000  
Electrolux electric deep fryer 168861 810-31052000  
Electrolux electric deep fryer 168864 020-25072005  
Electrolux electric deep fryer 168865 020-25072005  
Electrolux electric deep fryer 168868 020-25072005  
Electrolux electric deep fryer 168869 020-25072005  
Electrolux electric deep fryer 168990 020-25072005  
Electrolux electric deep fryer 168991 020-25072005  
Electrolux electric deep fryer 168992 020-25072005  
Electrolux electric deep fryer 168993 020-25072005  
Electrolux electric deep fryer 168994 020-25072005  
Electrolux electric deep fryer 168995 020-25072005  
Electrolux electric deep fryer 168996 020-25072005  
Electrolux electric deep fryer 168997 020-25072005  
Electrolux electric deep fryer 174503 9109-814  
Electrolux electric deep fryer 174508 9109-423  
Electrolux electric deep fryer 178117 12122005-  
Electrolux electric deep fryer 178118 19092005-  
Electrolux electric deep fryer 178119 19092005-  
Electrolux electric deep fryer 178120 30012006-  
Electrolux electric deep fryer 178121 30012006-  
Electrolux electric deep fryer 178122 19092005-



*magazin online HORECA*

**Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice**

Electrolux electric deep fryer 178123 19092005-  
Electrolux electric deep fryer 178124 30012006-  
Electrolux electric deep fryer 178125 30012006-  
Electrolux electric deep fryer 178126  
Electrolux electric deep fryer 178127  
Electrolux electric deep fryer 178128  
Electrolux electric deep fryer 178129  
Electrolux electric deep fryer 178131  
Electrolux electric deep fryer 178132  
Electrolux electric deep fryer 178418  
Electrolux electric deep fryer 178420  
Electrolux electric deep fryer 178421  
Electrolux electric deep fryer 178422  
Electrolux electric deep fryer 178423  
Electrolux electric deep fryer 178424  
Electrolux electric deep fryer 178425  
Electrolux electric deep fryer 178717  
Electrolux electric deep fryer 178718  
Electrolux electric deep fryer 178719  
Electrolux electric deep fryer 178720  
Electrolux electric deep fryer 178721  
Electrolux electric deep fryer 178722  
Electrolux electric deep fryer 178723  
Electrolux electric deep fryer 178724  
Electrolux electric deep fryer 178725  
Electrolux electric deep fryer 178726  
Electrolux electric deep fryer 178727  
Electrolux electric deep fryer 178728  
Electrolux electric deep fryer 178729  
Electrolux electric deep fryer 178731  
Electrolux electric deep fryer 178732  
Electrolux electric deep fryer 178827  
Electrolux electric deep fryer 178828  
Electrolux electric deep fryer 178840  
Electrolux electric deep fryer 178841  
Electrolux electric deep fryer 200338 315-  
Electrolux electric deep fryer 200339 315-  
Electrolux electric deep fryer 200342 311-  
Electrolux electric deep fryer 200344 323-



*magazin online HORECA*

**Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice**

Electrolux electric deep fryer 200345 323-  
Electrolux electric deep fryer 200346  
Electrolux electric deep fryer 200347  
Electrolux electric deep fryer 200352 06062005-  
Electrolux electric deep fryer 200354 06062005-  
Electrolux electric deep fryer 200356 06062005-  
Electrolux electric deep fryer 201039 048-07122003  
Electrolux electric deep fryer 201042 138-07122003  
Electrolux electric deep fryer 201051 141-07122003  
Electrolux electric deep fryer 201053 138-07122003  
Electrolux electric deep fryer 201054 138-07122003  
Electrolux electric deep fryer 210338  
Electrolux electric deep fryer 210339  
Electrolux electric deep fryer 210342  
Electrolux electric deep fryer 210344 14032005-30111999  
Electrolux electric deep fryer 210352  
Electrolux electric deep fryer 210354  
Electrolux electric deep fryer 210356  
Electrolux electric deep fryer 211039 048-01092002  
Electrolux electric deep fryer 211042 138-31012005  
Electrolux electric deep fryer 211051 141-31012005  
Electrolux electric deep fryer 211053 138-31012005  
Electrolux electric deep fryer 211054 138-31012005  
Electrolux electric deep fryer 220338  
Electrolux electric deep fryer 220339  
Electrolux electric deep fryer 220342  
Electrolux electric deep fryer 220344 06122004-  
Electrolux electric deep fryer 220352  
Electrolux electric deep fryer 220354  
Electrolux electric deep fryer 220356  
Electrolux electric deep fryer 221042 138-02022004  
Electrolux electric deep fryer 221051 141-07122003  
Electrolux electric deep fryer 221053 138-07122003  
Electrolux electric deep fryer 221054 138-07122003  
Electrolux electric deep fryer 285512 9809-  
Electrolux electric deep fryer 285751 9809-  
Electrolux electric deep fryer 285752 9809-  
Electrolux deep fryer gas 201005 301-  
Electrolux deep fryer gas 201006 301-





*magazin online HORECA*

**Piese schimb / Accesorii / Consumabile / Reparații  
Automatizări / Materiale Electrice**

Electrolux deep fryer gas 221005 301-  
Electrolux deep fryer gas 221006 301-  
Electrolux gas range + electric oven 168007 810-  
Electrolux gas range + electric oven 168008 810-31121999  
Electrolux gas range + electric oven 168407 810-19122005  
Electrolux gas range + electric oven 168408 810-29121999  
Electrolux gas range + electric oven 168607 810-01092000  
Electrolux gas range + electric oven 168608 810-29121999  
Electrolux gas range + electric oven 168807 810-25072005  
Electrolux gas range + electric oven 168808 810-25072005  
Electrolux electric grill 168109 810-31121999  
Electrolux electric grill 168110 810-31121999  
Electrolux electric grill 168111 810-30111999  
Electrolux electric grill 168112 810-31121999  
Electrolux electric grill 168509 810-02062000  
Electrolux electric grill 168510 810-30111999  
Electrolux electric grill 168511 810-19122005  
Electrolux electric grill 168512 810-29121999  
Electrolux electric grill 168709 810-30111999  
Electrolux electric grill 168710 810-30111999  
Electrolux electric grill 168909 810-25072005  
Electrolux electric grill 168910 810-25072005  
Electrolux electric grill 168911 810-25072005  
Electrolux electric grill 168912 810-25072005  
Electrolux electric grill 178097  
Electrolux electric grill 178107  
Electrolux electric grill 178697  
Electrolux electric grill 178707  
Electrolux electric grill 285516 9809-  
Electrolux electric grill 285756 9809-  
Electrolux electric griddle 168482 810-19122005  
Electrolux electric griddle 168483 810-19122005  
Electrolux electric griddle 168484 810-19122005  
Electrolux electric griddle 168485 810-19122005  
Electrolux electric griddle 168486 810-19122005  
Electrolux electric griddle 168487 810-19122005  
Electrolux electric griddle 168488 810-30111999  
Electrolux electric griddle 168489 810-19122005  
Electrolux electric griddle 168490 810-29121999



*magazin online HORECA*

**Piese schimb / Accesorii / Consumabile / Reparații**  
**Automatizări / Materiale Electrice**

Electrolux electric griddle 168491 810-19122005  
Electrolux electric griddle 168492 810-19122005  
Electrolux electric griddle 168493 810-30111999  
Electrolux electric griddle 168682 810-01092000  
Electrolux electric griddle 168683 810-30111999  
Electrolux electric griddle 168684 810-30111999  
Electrolux electric griddle 168685 810-01092000  
Electrolux electric griddle 168686 810-01092000  
Electrolux electric griddle 168687 810-01092000  
Electrolux electric griddle 168688 810-29121999  
Electrolux electric griddle 168689 810-30111999  
Electrolux electric griddle 168690 810-01092000  
Electrolux electric griddle 168691 810-01092000  
Electrolux electric griddle 168692 810-01092000  
Electrolux electric griddle 168693 810-01092000  
Electrolux electric griddle 178059 31102005-  
Electrolux electric griddle 178060 31102005-  
Electrolux electric griddle 178061 31102005-  
Electrolux electric griddle 178062 31102005-  
Electrolux electric griddle 178063 31102005-  
Electrolux electric griddle 178064 31102005-  
Electrolux electric griddle 178065  
Electrolux electric griddle 178066  
Electrolux electric griddle 178067  
Electrolux electric griddle 178068



**Kalva Solutions SRL**  
PLOIESTI, str. Cuza Voda nr.9 D8B parter  
Tel.: 0737095202

*magazin online HORECA*

**Piese schimb / Accesorii / Consumabile / Reparații**  
**Automatizări / Materiale Electrice**

